


Polycom VVX 300 & 310 Business Media Quick Reference Guide

The information in this guide applies to both the VVX 300 and VVX 310 phones. Configurations vary and the screen displays used in this guide may not reflect those on your phone. See your system administrator for more information. For use with Polycom® UC Software 4.1.4 or later.

Phone Views


Your phone has four main Views: **Home, Calls, Active Call and Lines view** (the default). You can access Home and Lines view at any time. If your phone has one or more calls, you can also access Calls or Active Call view.

For **Home** view from any menu, press 

Press  to alternate between Home and Lines view

Home View

Home view displays icons you can select to access phone functions.

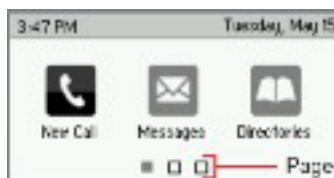

Indicator

You can use the right, left, up, and down arrow keys to display more icons.

Lines View

Lines view displays phone Lines, Favorites, and soft keys.



Phone Line

Favorites

Soft Keys

If your phone is idle, you can press the Line key to access the Dialer.

Skyway West Business Internet Services
Sales: 1 877 771 1077 ext 2
www.skywayuc.com

Calls View

If your phone has one or more calls, you can access Calls view.



No. of Calls

Active

Held


Call color indicates status:

- **Medium grey** - Active call
- **Dark grey** - Held calls
- **White** - Incoming call



Use the up and down arrow keys to select a call (highlight it). The soft keys control the highlighted call.

Entering Data

Use the dialpad keys to enter information. To backspace, press **Backspace** 

To type with the dialpad keys, press a key repeatedly to view the character options and stop to select.

To type other characters, press **Encoding** or **Mode**.



When using the dialpad keys, use the 1, *, 0, and # keys.


Tip: Switching Between Lines & Calls View When in Calls view, switch to Lines view by pressing **More > Lines**.

Switch back to Calls view by pressing **More > Calls**.

About Calls

Only one call can be active at one time.



You can use the handset, speakerphone, or headset for calls. During a call, you can change modes by picking up the handset, or by pressing  or .



If you navigate away from your call(s), press  to see **Active Call** or **Calls** view again.

TIP: In this guide, soft keys are referred to by their name only. For example, to end an active call, press **End Call**.



Placing Calls



Pick up the handset, or press  or . Enter the phone number, and press **Send**.

Or enter the phone number first, then press **Dial**, pick up the handset, or press  or .



From **Lines** view: Press the phone Line key, enter the phone number, and press **Send**.

From **Home** view: Select **New Call** using the left and right arrow keys. Enter the phone number, and press **DIAL**.



Answering Calls

To answer with the speakerphone, press  or tap **Answer**. To answer with the handset, pick up the handset. To answer with a headset, press . To answer a new call while on an active call, press **Answer**. The current call will be held.



Ending Calls

To end an active call, replace the handset, press  or press . Or, press **End Call**. To end a held call, navigate to Calls view and highlight the held call. Press **Resume**, and press **End Call**.

Holding Calls

From Calls view, press **Hold** or . Remember to highlight the call first. To resume a held call, press **Resume** or  again.

Transferring Calls

From Calls view, press **Transfer** or , and call the other party. When you hear the ringback tone, or after you talk with the other party, tap **Transfer** or  again. Press **Blind** to complete a transfer without waiting for the ringback tone.

Timesaver: Select a recent call or **Placing Calls Quickly** Favorite, or select a contact's phone number in the Contact Directory.

Polycom VVX 300 & 310 Business Media Quick Reference Guide

Forwarding Calls

To enable call forwarding, press **Forward** from Home or Lines view. Select the forwarding type to enable, enter a forwarding number, and press **Enable**.

To disable call forwarding, press **Forward** from Home or Lines view, select the forwarding type to disable, and press **Disable**.

To enable per-call forwarding: As your phone rings, press **Forward**, enter the forwarding number, and press **Forward**.

Placing Conference Calls

Call the first party, and after the call connects, press **More**, and select **Confrc**. Then, dial and connect with the second party and press **Confrc** again.

From Lines or Calls view, you can:

- Press **Hold** to hold all participants.
- Press **End Call** to remove yourself from the call, but keep the other participants connected.
- Press **Manage** (if available) to manage each participant.
- Press **Split** to end the conference and hold all participants.

Favorites

Favorites are contacts you call most often. Your Favorites list displays all your Favorites. A smaller number of Favorites displays in Lines view.

- **To view your Favorites list** - From Home view, press **Home** and select **Directories > Favorites**.
- **To make a contact a Favorite** - Navigate to your Contact Directory and select the contact. Press **Info**, press **More**, and select **Add**. Press **Yes** to confirm.
- **To dial a Favorite** - Press the Favorite from Home or Lines view, or from your Favorites list.

Viewing Recent Calls

From Lines view, do one of the following:

- Press **Home**, select **Directories**, and select **Recent Calls** to view your Recent Calls list.
- Press the right arrow key to view the recent Placed Calls.
- Press the left arrow key to view the recent Received Calls.
- Press the down arrow key to view the recent Missed Calls.
- Press the up arrow key to view Favorites.
- From the Recent Calls list, press **Sort** to sort and order calls, press **Type** to display only certain calls, or select a call record to call the person.

Contact Directory

To select a contact from the Contact Directory, press

- **To view your Directory** - Select **Directories** from Home view. Press **Contact Directory** on the Directory screen.
- **To add a contact** - Navigate to your Contact Directory and press **Add**. Enter the contact's information, and press **Save**. To make a contact a Favorite, enter a Favorite Index number.
- **To update contact information** - Navigate to your Contact Directory and select the contact. Press **Info**, press **Edit**, update the contact's information, and press **Save**.
- **To delete a contact** - Navigate to your Contact Directory and select the contact. Press **Info**, press **Delete** and press **Yes** to confirm.
- **To search for a contact** - Navigate to your Contact Directory and press **Search**. Enter search criteria, and press **Search**.
- **To dial a contact from your Directory** - Navigate to your Contact Directory and select the contact. From the contact's information screen, select the contact's phone number and press **DIAL**.

TIP: What Does A star, ★, indicate a Star Mean? Favorite.

Listening to Voice Mail

An envelope, **✉**, adjacent to a Line key, indicates that you have voicemail. Select **Messages** from Home view or press **✉**, and select **Message Center**. Press **Connect** and follow the prompts.

Muting the Microphone

During a call, press **Mute** so other parties can't hear you.

To disable Mute, press **Mute** again.

This applies to calls using the handset, headset, and speakerphone.

Using Do Not Disturb

To enable or disable ringing, press **DND** from Home or Lines view. When Do Not Disturb is enabled, the **DND** icon, **🔕**, displays in the status bar and beside the appropriate Line key.

Adjusting Volume

To change call volume, press **[-] [+]** during a call. To change the ringer volume, press **[-] [+]** when the phone is idle or ringing.

Timesaver: *If you have an active Placing Conference Calls and held call, press **Join** to set-up a conference.*

Updating Ringtones

To change the incoming call ringtone, select **Settings** from Home view, and press **Basic > Ring Type**. If more than one line is configured, **select the line then select the ringtone you want**.

To set a ringtone for a contact, navigate to your Contact Directory and select the contact. Press **INFO**. Press **Edit**, update the contact's **Ring Type**, and press **Save**.



For detailed information on how to use your phone, see the Polycom VVX 300 and 310 Business Media Phone User Guide, available by navigating to your phone's Support page from Polycom Voice Support.